

Endicott Research Group, Inc.

2601 Wayne St., Endicott, NY 13760 607-754-9187 Fax 607-754-9255 http://www.ergpower.com

LDS3388

Specifications and Applications Information

09/08/06 Preliminary

Two Lamp
DC to AC Inverter


The ERG LDS3388 (LDS Series) DC to AC inverter features onboard connectors and can be easily dimmed using an external analog control signal or an external PWM generator.

Powered by a regulated +12 Volt DC source, the LDS3388 is designed to power the backlight of the Optrex T-51639D084JU-FW-A-AB.


Product Features

- ✓ Small Package Size, less than 9mm in height.
- ✓ High Dimming Ratio
- ✓ High Efficiency
- ✓ Made in U.S.A.

This unit complements our L Series of DC to AC Inverters

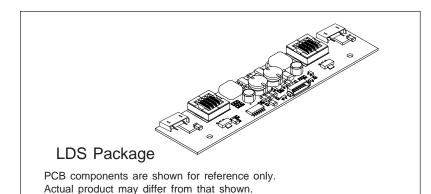

Connectors				
J2,J3	J1			
JST	Molex			
SM02(8.0)B-BHS-1-TBLFSN	53261-0871			

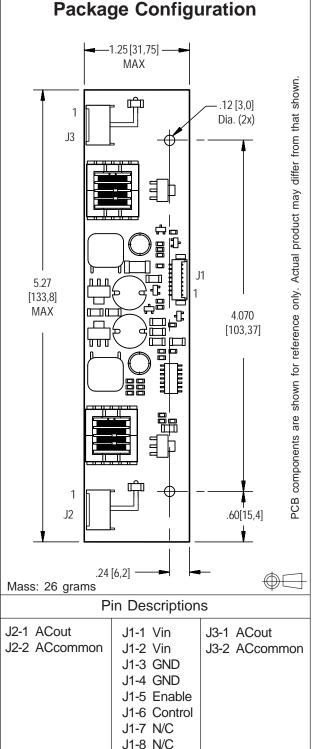



Absolute Maximum Ratings (Note 1)

Rating	Symbol	Value	Units	
Input Voltage	V _{in}	-0.3 to +13.2	Vdc	
Enable	V _{Enable}	-0.3 to +0.3	Vdc	
Operating Temperature	T _a	-20 to +85	°C	
Storage Temperature	T _s	-40 to +85	°C	

Recommended Operating Conditions

Rating	Symbol	Value	Units
Input Voltage	V _{in}	+10.8 to 12.6	Vdc
Operating Temperature (Note 2)	T _a	-20 to +50	°C

Electrical Characteristics

Unless otherwise noted Vin = 12.00 Volts dc and Ta = 25°C and unit has been running for 20 minutes.

Characteristic	Symbol	Min	Тур	Max	Units
Input Current	I in	-	.60	.68	A _{DC}
Input Ripple Current	l rip	-	20	-	mA _{pk-pk}
Operating Frequency	F _o	33	38	43	KHz
Efficiency	h	-	75	-	%
Output Voltage (no load)	V _{start}	1500	-	-	V
Output Voltage (When powering the referenced display)	V _{out}	-	450	-	V
Output Current (per lamp)	I out	-	6.0	-	mArms
Enable (pin J1-5)					
Turn-off Threshold	V thoff	-	-	1	V
Turn-On Threshold	V _{thon}	2.5	-	Vin	V
Impedance to Vin	R _{Disable}	9.5	10.0	10.5	Kohms

(Note 1) Reliable and predictable operation of the device is not guaranteed with applied stresses at or beyond those listed in "Absolute Maximum Ratings". Operation at these limits may reduce device reliability and is therefore not recommended. Please refer to "Recommended Operating Conditions" for reliable operation of the device.

(Note 2) Reliable operation above 50°C is possible if airflow is provided.

Application Notes:

- 1) The minimum distance from high voltage areas of the inverter to any conductive material should be .12 inches per kilovolt of starting voltage.
- 2) Mounting hardware should be non-conductive.
- 3) Open framed inverters should not be used in applications at altitudes over 10,000 feet.
- 4) Contact ERG for possible exceptions.

Onboard PWM

Unless otherwise noted Vin = 12.00 Volts DC , T_a = 25 $^{\circ}$ C and unit has been running for 5 minutes.

Characteristic	Symbol	Min	Тур	Max	Units
Frequency	f _{pwm}	-	160	-	H _Z
Control Input Bias Current	I chias	-	-	10	uA

Pin Descriptions

Vin Input voltage to the inverter. The two pins should be connected for optimum reliability and efficiency.

GND Inverter ground. The two pins should be connected for optimum reliability and efficiency.

Control Analog voltage input to the onboard pulse width modulator. Increasing this voltage increases the off

time of the onboard PWM resulting in decreased brightness. The inverter is full on when this voltage is

near inverter ground.

Enable Inverter Enable. Pull this pin low to disable inverter operation. This pin must be high to enable the

inverter. The onboard PWM is always utilized.

Application information

The LDS series of inverters is designed to power up to four cold cathode fluorescent lamps with combined power up to twelve watts. An external analog control interfaces with an onboard pulse width modulator to provide dimming control. The LDS inverter can reliably dim to less than 5% duty cycle.

External shutdown of the inverter is accomplished using the Enable pin. Pulling this pin low (below Vthoff) disables the inverter. Enabling the inverter is accomplished by pulling this pin high (above Vthon).

If analog voltage dimming is required, the analog voltage is applied to the Control pin. Figure 1 shows how to connect the inverter for onboard PWM operation. Graph 1 shows the relationship of PWM duty cycle to input control voltage.


If an external PWM is used, simply connect the Enable pin to the PWM source and connect the Control pin to inverter ground. If the onboard PWM is used, connect the analog voltage to the Control pin.




Endicott Research Group, Inc.


2601 Wayne St., Endicott, NY 13760 607-754-9187 Fax 607-754-9255 http://www.ergpower.com



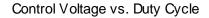

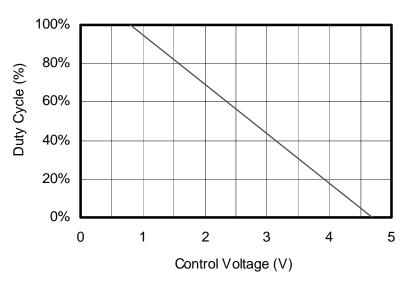

Graph 1

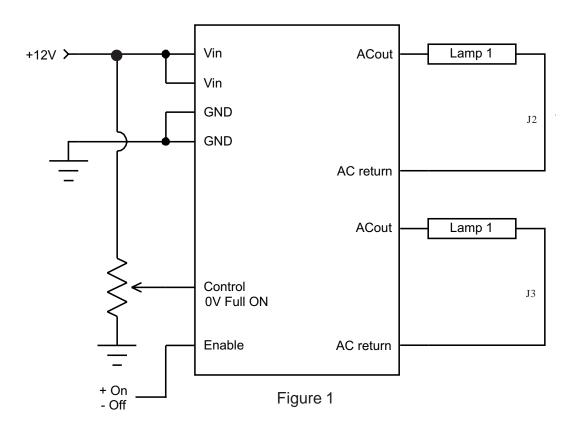



Endicott Research Group, Inc. (ERG) reserves the right to make changes in circuit design and/or specifications at any time without notice. Accordingly, the reader is cautioned to verify that data sheets are current before placing orders. Information furnished by ERG is believed to be accurate and reliable. However, no responsibility is assumed by ERG for its use.