

Endicott Research Group, Inc.

2601 Wayne St., Endicott, NY 13760 607-754-9187 Fax 607-754-9255 http://www.ergpower.com

8mD3546

Specifications and Applications Information

11/01/06 Preliminary


The ERG 8mD3546 (8mD Series) DC to AC inverter features onboard connectors and can be easily dimmed using an external analog control signal or external PWM generator.

Powered by a regulated +12 Volt DC source, the 8mD3546 is designed to power the L.G. Phillips LB070WV1 display backlight.

Product Features

- ✓ Small Package Size, less than 9mm in height.
- ✓ High Dimming Ratio
- ✓ High Efficiency
- ✓ Made in U.S.A.


This unit complements our 8m Series of DC to AC Inverters

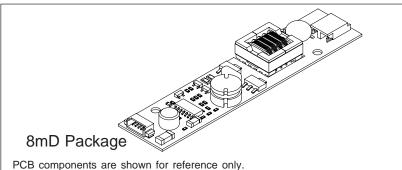

Actual product may differ from that shown.

Connectors			
J1	J2		
Molex 53261-0590	JST SM02B-BHSS-1-TB		

Single Lamp DC to AC Inverter

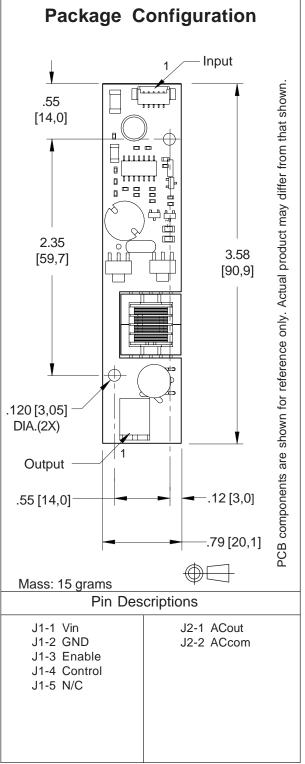



Absolute Maximum Ratings

Rating	Symbol	Value	Units
Input Voltage Range	V _{in}	-0.3 to +13.2	Vdc
Storage Temperature	T _{stg}	-40 to +85	°C

Operating Characteristics

With a load simulating the referenced display and lamp warm-up of 5 minutes. Unless otherwise noted Vin = 12.00 Volts dc and $Ta = 25^{\circ}\text{C}$.

Characteristic	Symbol	Min	Тур	Max	Units	
Input Voltage	V _{in}	+10.8	+12.0	+12.6	Vdc	
Component Surface Temperature	Ts	-20		+80	°C	
Input Current (Note 1)	l in	-	.35	.41	Adc	
Input Ripple Current	l rip	-	20	-	mA _{pk-pk}	
Operating Frequency	F _o	30	35	40	kHz	
Minimum Output Voltage	Vout (min)	1500	-	-	Vrms	
Efficiency	h	-	78	-	%	
Output Current (per lamp)	I out	-	6.1	-	mArms	
Output Voltage	Vout	-	540	-	Vrms	
Enable Pin (Note2)						
Turn-off Threshold	V thoff	GND	-	1	Vdc	
Turn-On Threshold	V thon	2.5	-	Vin	Vdc	
Impedance to Vin	R _{Enable}	44.6	47	49.4	kOhms	

⁽Note 1) Reliable and predictable operation of the device is not guaranteed with applied stresses at or beyond those listed in "Absolute Maximum Ratings". Operation at these limits may reduce device reliability and is therefore not recommended. Please refer to "Recommended Operating Conditions" for reliable operation of the device.

(Note 2) The inverter is always enabled with an internal pullup resistor tied to the enable pin. A ground on the enable input will turn the inverter off.

Application Notes:

- 1) The minimum distance from high voltage areas of the inverter to any conductive material should be .12 inches per kilovolt of starting voltage.
- 2) Mounting hardware should be non-conductive.
- 3) Open framed inverters should not be used in applications at altitudes over 10,000 feet.
- 4) Contact ERG for possible exceptions.



Onboard PWM

Unless otherwise noted Vin = 12.00 Volts DC , Ta = 25 °C and unit has been running for 5 minutes.

Characteristic	Symbol	Min	Тур	Max	Units
Frequency	f _{pwm}	-	160	-	Hz
Control Input Bias Current	I cbias	-	-	10	uA

Pin Descriptions

Vin Input voltage to the inverter.

GND Inverter ground.

Control Analog voltage input to the onboard pulse width modulator. Increasing this voltage increases the off

time of the onboard PWM resulting in decreased brightness. The inverter is full on when this voltage

is near inverter ground.

Enable Inverter Enable. The inverter is always enabled with an internal pullup resistor tied to the enable pin.

Pull this pin low to disable inverter operation. The onboard PWM is always utilized.

Application information


The 8mD series of inverters is designed to power one cold cathode fluorescent tube with four watts. An external analog control interfaces with an onboard pulse width modulator to provide dimming control. The 8mD inverter can reliably dim to less than 5% duty cycle.


External shutdown of the inverter is accomplished using the Enable pin. Pulling this pin low (below Vthoff) disables the inverter.

If analog voltage dimming is required, the analog voltage is applied to the Control pin. Figure 1 shows how to connect the inverter for onboard PWM operation. Graph 1 shows the relationship of PWM duty cycle to input control voltage.

If an external PWM is used, simply connect the Enable pin to the PWM source and connect the Control pin to inverter ground. If the onboard PWM is used, connect the analog voltage to the Control pin.






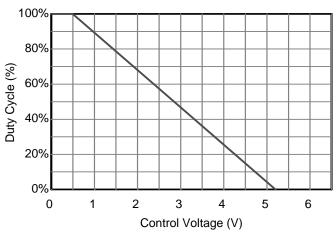

Graph 1

Typical Application

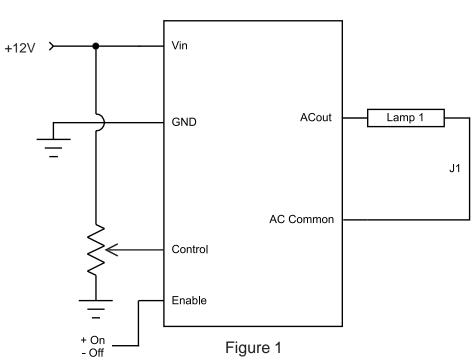



Endicott Research Group, Inc. (ERG) reserves the right to make changes in circuit design and/or specifications at any time without notice. Accordingly, the reader is cautioned to verify that data sheets are current before placing orders. Information furnished by ERG is believed to be accurate and reliable. However, no responsibility is assumed by ERG for its use.